



DANCAR CRUISE CONTROL

Userinstruction

Steering wheel command

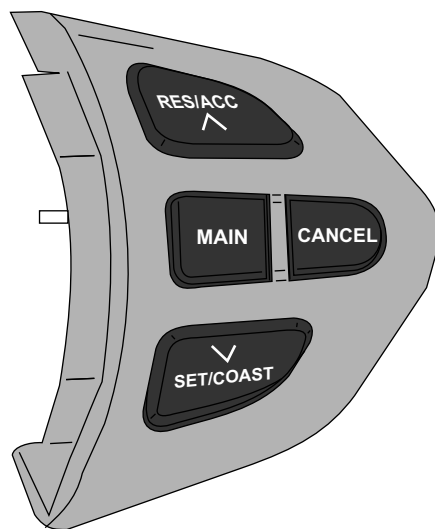

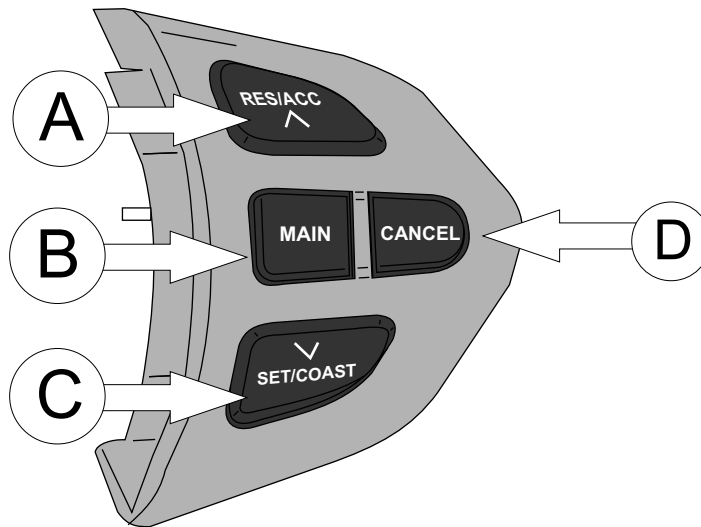

To activate the system

Push "Main" button (B) to turn the system on. When the system is ready for use, the "cruise" indicator in the instrument panel light up.

Storing desired cruising speed

To store your desired cruising speed press push the "Res/Acc"(A) button. A "click" is heard from the unit. This is a safety feature. You must be travelling at a speed above 35 km/h or less than 140 km/h.

The system is tested and approved at speeds between 35 km/h and 140 km/h.

The desired cruising speed is now stored and the vehicle will travel at this speed without need to use either the accelerator or the brakes.

Changing cruising speed

Each push on the "Res/Acc" button (A) will increase the cruising speed by approx. 1 km/h.

Each push on the "Set/Coast" button (C) will reduce the cruising speed by approx. 1 km/h.

If keys are hold down for more than 1 sec., the cruise speed will change until release of the button.

Using the last stored cruising speed. (Memory function)

The system remembers the last stored cruising speed until the ignition or system is turned off.

This last stored cruising speed can be used at speeds over 35 km/h. Pushing the "Res/Acc-" button will bring the vehicle to the last set speed.

Increasing speed with the accelerator

When travelling at the set cruising speed, the accelerator may be used to increase the vehicle's speed. A "click" sound is heard from unit (safety feature).

To de-activate the system

The system can be turned off by pushing the brake or clutch pedal (not with automatic gearbox), or by pushing the Cancel button (D). When using button "Main" (B) for de-activation, the system lose the memory of last stored cruise speed and the "cruise" indication in instrument panel switch off.

When using the clutch, for de-activation, the rpm, will raise a bit, before the system switch off. This is normal.

Safety note:

To prevent possible damage to the engine from high revs, store the desired cruising speed in the gear that will be used for driving at this speed. Do never use the cruise system in congested traffic or on wet slippery road. If a situation ever arise where system will not disengage according to normal use, you can always turn the ignition to OFF. If the veichle has a steering lock, be sure it cannot be activated when the ignition key is in the ignition lock or the car is in gear.

Info

Dealer stamp

Day of installation: