

Instruction

# Opel/ Renault GB

Model Renault	Traffic 100/132 HP CDI 100 /6 gear and automatic	Type of model	CDI/ CDTI 2,9
		Description	Cruise control
	Master CDI 140 6/ gear	Part number	DC 90501
		Manufacturer	Dancar Autosikring
Model Opel	Vivaro/ Movano		
Production	040607	Installation time	40 min.




Tested and approved until 140 km/h

The product which is described in the guide was developed, produced and inspected as regards the necessary security precautions. In order to guarantee a faultless operation and thus exclude the danger to people and objects, this product must be mounted in accordance with professional guidelines. Internal fitting must thus only be performed by professionals who possess the necessary technical knowledge and the necessary tools. The mounting guide must be read thoroughly. Before starting the mounting you must make sure that the mounting kit is complete.


## CONTENTS

CC 002

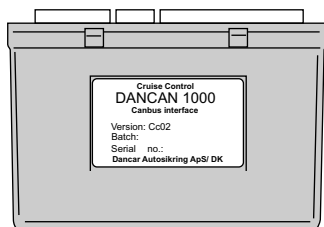


Main unit  
v 3.3  
v 3.2

10505V2

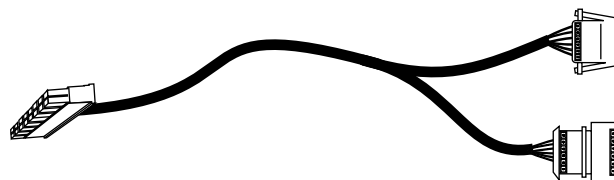

Main cable

MS-700

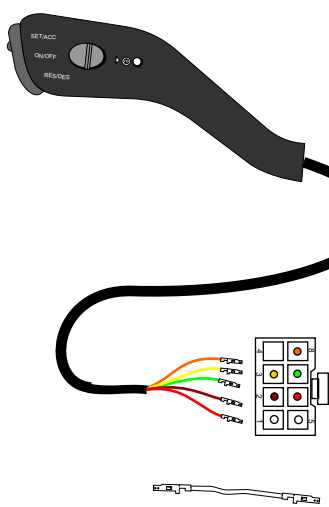


JKH100DK



User manual


JKH005GB

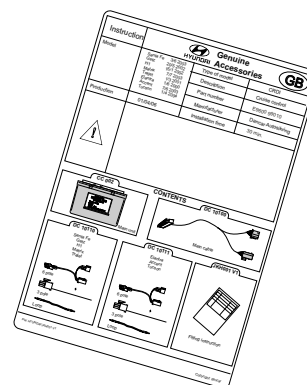


Fitting instruction

Copyright

Dancar Autosikring ApS Smedevænget 20 Dk-2640 Hedehusene tlf: 46591228 www.dancar.dk

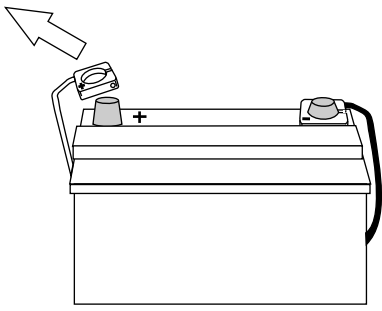


Disconnect battery

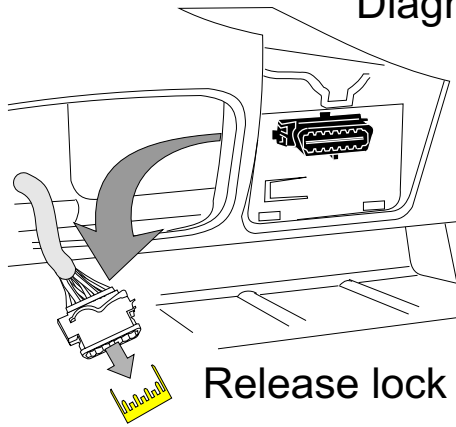


Release lock

Diagnose connector

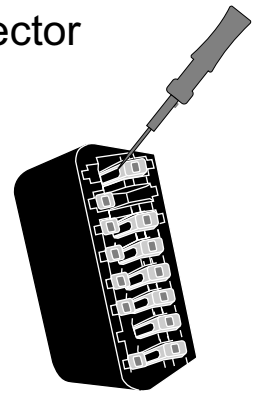

Pin release methode

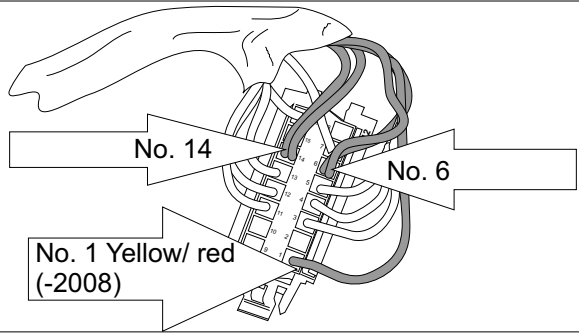


No. 14

No. 6


No. 1 Yellow/ red (-2008)

Diagnose connector  
No. 14 (-2008 White/ Red)  
No. 14 (2008- White/ Black)

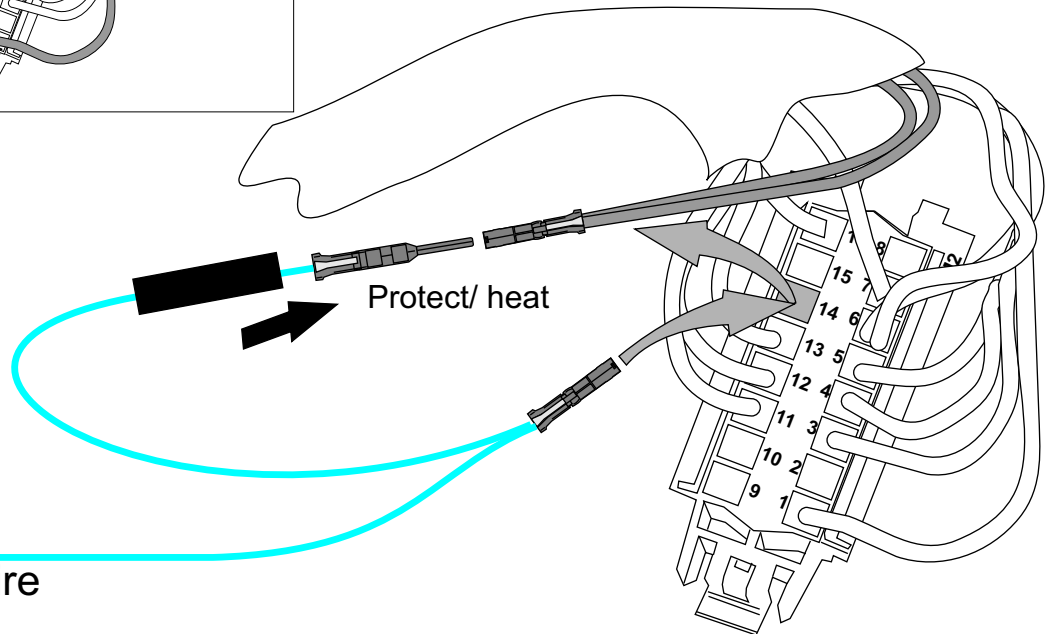

Protect/ heat

Blue cruise wire

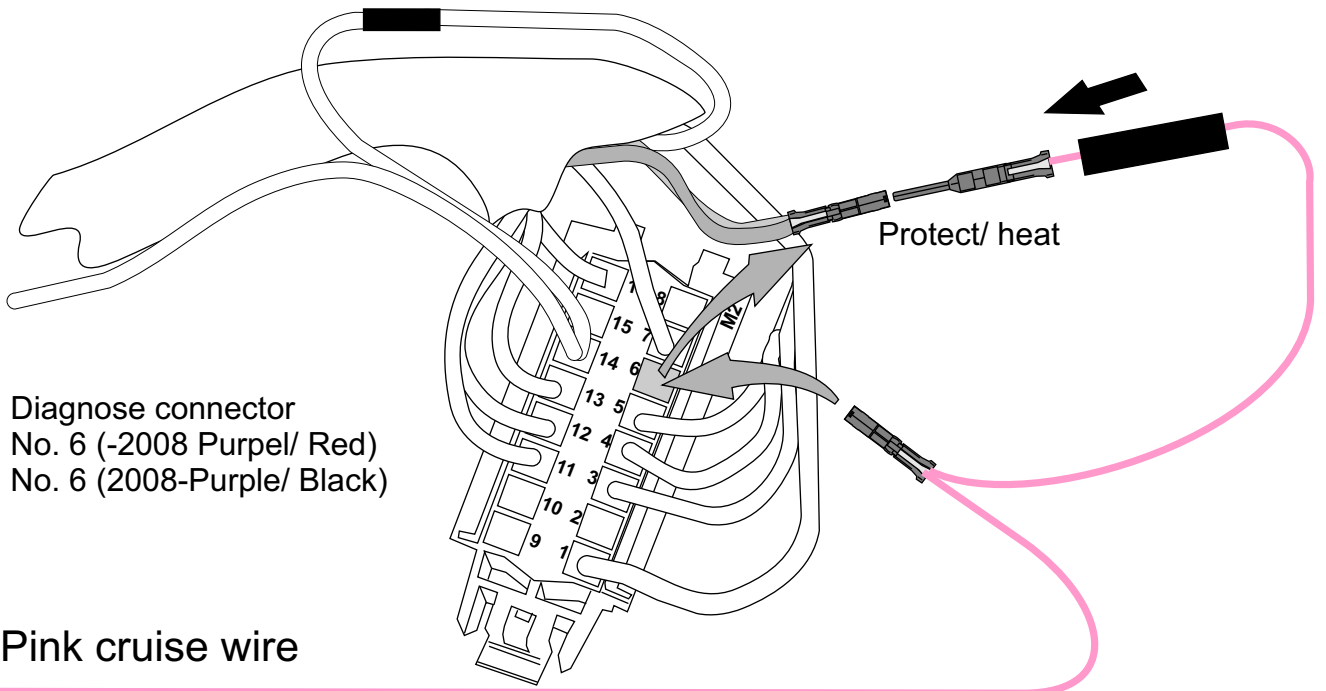

Protect/ heat



Diagnose connector  
No. 6 (-2008 Purpel/ Red)  
No. 6 (2008-Purple/ Black)

Pink cruise wire

-2008

2008-

Diagnose connector  
No. 1 Yellow/ red

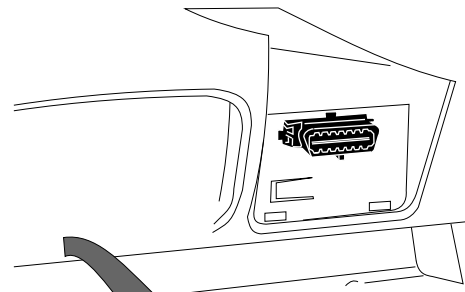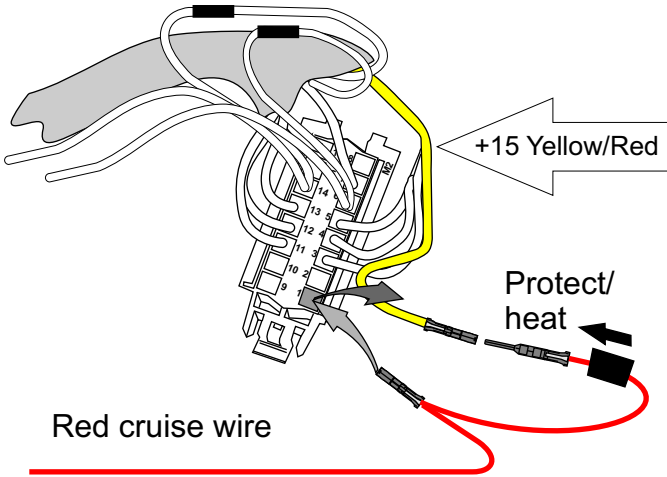

+15 Yellow/Red  
10 amp.  
Brake fuse  
line no.19


ESP SWITCH  
6 pole GRAY

Protect/  
heat

Red cruise wire


Place unit

Insert connector  
Insert lock

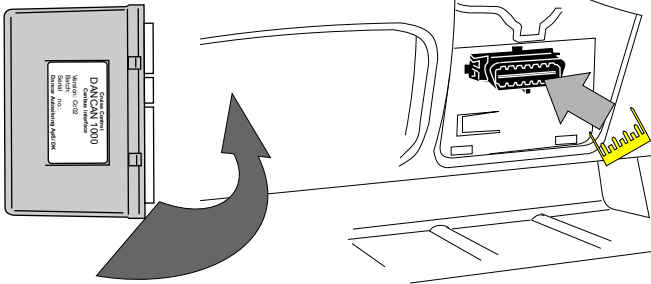


Car wire

Cruise wire

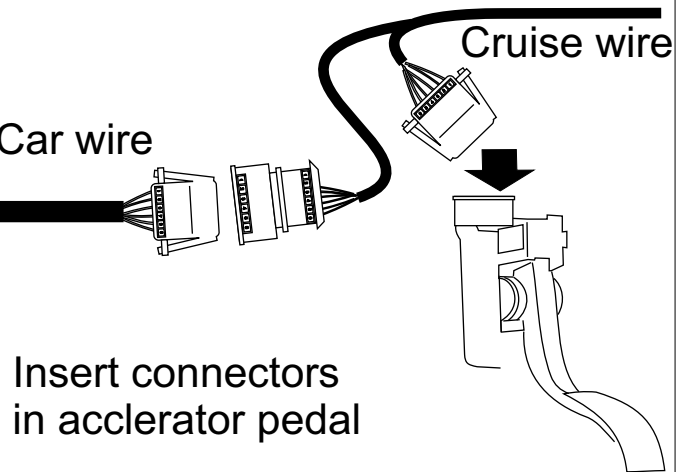

Insert connectors  
in acclerator pedal

Connect  
battery

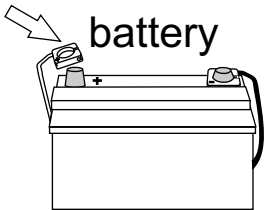

ESP connector	(2008-) no. 1
Diagnose connector	(-2008) no. 1
Diagnose connector	(all) no. 6
	(all) no. 14



Yellow/red (+15)

Purple/... (can high)


White/... (can low)

CAR WIRES

Control handle  
No. MS-700

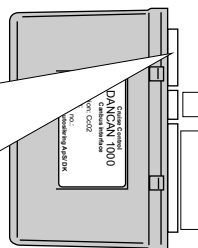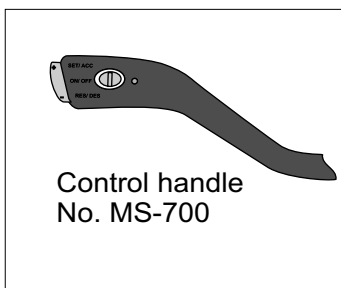

GENERAL SCHEME

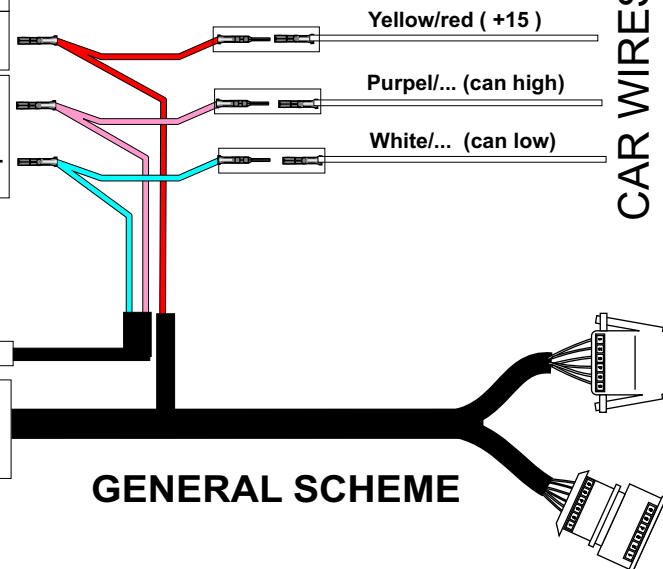

**NOTES**

CAR-PROGRAM LIST					USABLE CONTROL UNIT	
						
Car model	Type	Year	Remark	Program no:	SW-10	MS-700
Trafic/ Master		2005-	Manuel gear	1	No	Yes
Trafic/ Master		2005-	Automatic gear	2	No	Yes
Kangoo		2006-	Gasoline	4*	No	Yes
Kangoo		2006-	Diesel	5*	No	Yes
Vivaro/ Movano		2006-	Manuel gear	1	No	Yes
Vivaro/ Movano		2006-	Automatic gear	2	No	Yes

\* Only accessible on controlbox version 3.3

**DATA**

**Technical information:**

Consumption	20 mAh
Dimensions:	82X53X27
Weight:	57 g.
Supply:	12 v. dc
Marking:	<b>E11</b> marking
Patent:	PR 176226
Tüv/KBA:	90989
User instruction:	Seperat



10R-023610 Part No. 01T-063338

Updated fitting instruction and carlist see:  
[www.dancar.dk](http://www.dancar.dk)